


# Hamilton Beach®

COMMERCIAL

**GB** BAR BLENDER  
Operation Manual – Original (2)

**JP** バー ブレンダー  
取扱説明書 (8)

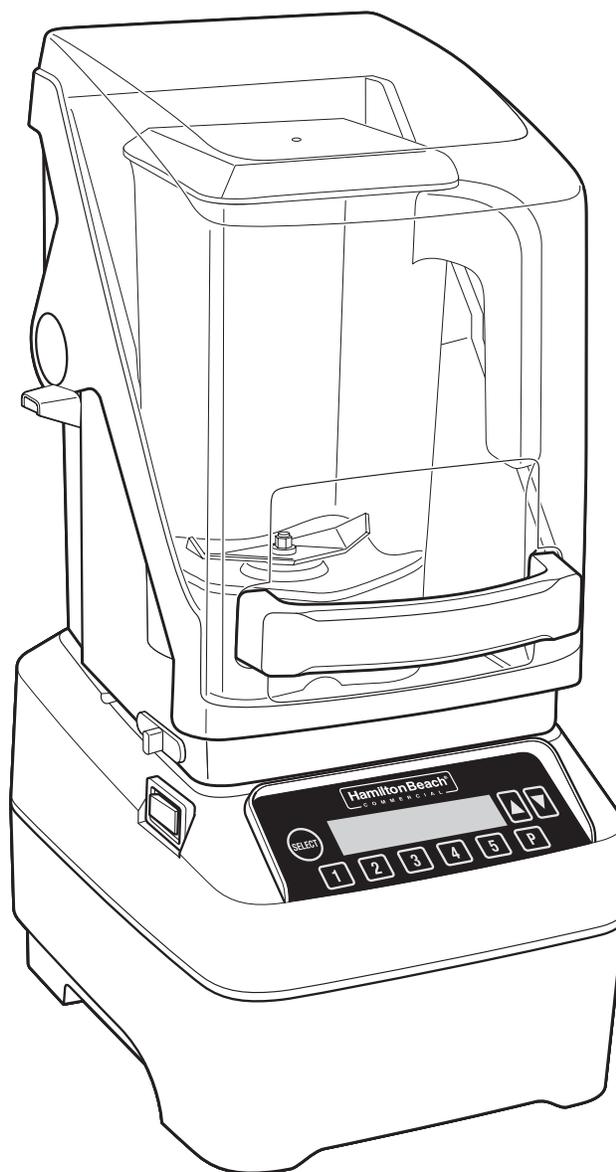

## HBH755 Series

840334100  
09/19

For more Good Thinking® visit [www.hamiltonbeachcommercial.com](http://www.hamiltonbeachcommercial.com)


## IMPORTANT SAFETY INSTRUCTIONS

**WARNING** – When using electrical appliances, basic safety precautions should be followed, including the following:

- These appliances are intended to be used for commercial applications, for example in kitchens of restaurants, canteens, hospitals and in commercial enterprises such as bakeries, butcheries, etc., but not for continuous mass production of food.
- Read the Operation Manual before using blender. Keep Operation Manual handy.
- Before first use, wash container assembly in hot, soapy water. Do NOT place in dishwasher.
- Plug into a grounded outlet.
- Do not remove ground.
- Do not use an adapter.
- Do not use an extension cord.
- Disconnect power before cleaning or servicing.
- To reduce risk of personal injury, unplug cord from outlet when not in use, and before putting on or taking off parts.
- Unplug the blender and inspect the power cord insulation for cracks on a weekly basis. Refer to “Technical Services” for repair or replacement.
- To protect against electrical shock, do not immerse cord, plug, or blender base in water or any other liquid.
- Do not clean base motor assembly with a high-pressure spray gun or steam cleaner.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use appliance for other than intended use.
- Not intended for use by or near children.
- Children should be supervised to ensure they do not play with the appliance.
- This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- To reduce risk of personal injury and to prevent damage to blender or container and cutter assembly, DO NOT insert utensils into blender container while operating blender.
- Do not store any kitchen utensils in the container because the blender would be damaged if inadvertently turned on.
- To prevent possibility of serious personal injury, keep hands out of blender container while operating blender. Always operate blender with container cover in place.
- Avoid contacting moving parts. Switch off the appliance and disconnect from power supply before changing accessories or approaching parts that move in use.
- Blades are sharp; handle carefully — especially when emptying or cleaning the blender jar.
- If cutter assembly blades are loose, discontinue use immediately and replace container. Do not attempt to repair or tighten cutter assembly.
- Be careful if hot liquid is poured into the blender container as it can be ejected out of the appliance due to a sudden steaming.
- Inspect container and cutter assembly daily. Do not use broken, chipped, or cracked container. Check cutter for wear, nicks, or broken blades. Do not use broken, loose, or cracked cutting blades.
- Do not use outdoors.
- This appliance is intended for short periods of operation, with a rated operating time of 2 minutes.
- Do not leave blender unattended while it is operating.
- To prevent damage to blender, container, or cutter assembly, DO NOT move or shake blender while in operation. If blending action stops during operation, turn blender OFF (●), remove container from base, remove container cover, and use a thin rubber spatula to push mixture towards cutters.
- Hot liquids may push lid off jar during blending. To prevent possible burns: Do not fill blender jar beyond the 1 quart (1 liter) level. With the protection of an oven mitt or thick towel, place one hand on top of lid. Keep exposed skin away from lid. Start blending at lowest speed.
- The blender is provided with a power switch/circuit breaker on the side of the unit. If the motor stops turning, reset the power switch.
- This blender’s motor is provided with a thermal overload protector. If the motor stops turning during operation or will not restart, unplug and allow to cool for 15 minutes. Plug unit back into outlet and resume operation.
- The normal function of this product may be disturbed by strong electromagnetic interference. If this occurs, simply reset the product and resume normal operation by following the operation manual. If normal operation cannot be resumed, place the product in a different location.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. If the supply cord of this appliance is damaged, it must be replaced by the manufacturer or its service agent or a similar qualified person. Refer to “Technical Services” for instructions on examination, repair, or electrical or mechanical adjustment.

– SAVE THESE INSTRUCTIONS –


These appliances are intended to be used for commercial applications, for example in kitchens of restaurants, canteens, hospitals and in commercial enterprises such as bakeries, butcheries, etc., but not for continuous mass production of food.

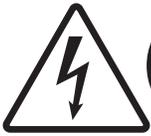

**Electrical Shock Hazard**  
Disconnect power before cleaning blender base.  
Failure to follow these instructions can result in death or electrical shock.



**Burn Hazard**  
Always use caution when blending hot contents.  
Failure to follow these instructions can result in burns.

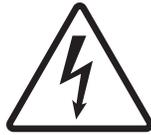

**Electrical Shock Hazard**  
Plug into a grounded outlet.  
Do not remove ground.  
Do not use an adapter.  
Do not use an extension cord.  
Failure to follow these instructions can result in death, fire, or electrical shock.




**Cut Hazard**  
Always place cover on container when blending.  
Do not put hands, spoons, or other utensils in container when blending.  
Failure to follow these instructions can result in broken bones, cuts, or other injuries.


## Sanitizing

Sanitize using 1 Tablespoon (15 ml) of household bleach per 1 gallon (3.8 liter) of clean, cool water (60°F/16°C), mixed according to the instructions on the bleach.

1. Fill container with sanitizing solution, replace lid and filler cap and run on LOW speed for 2 minutes. Empty container.
2. Wipe exterior with soft cloth dampened with sanitizing solution.
3. Immerse lid and filler cap in sanitizing solution for 2 minutes.
4. Place empty container on base and run on HIGH speed for 2 seconds to remove any moisture from the cutter assembly.
5. **When ready to use**, rinse with clean water.



8



8



9



10

## Technical Services


For assistance or replacement parts, call or email  
Technical Services:  
866-285-1087 (USA, Canada) or +1-910-693-4277,  
[commercial.support@hamiltonbeach.com](mailto:commercial.support@hamiltonbeach.com)

APAC Region: +86-400-930-2722,  
[hbcapac.support@hamiltonbeach.com](mailto:hbcapac.support@hamiltonbeach.com)

[www.hamiltonbeachcommercial.com](http://www.hamiltonbeachcommercial.com)

# Parts and Features

## Quiet Shield™

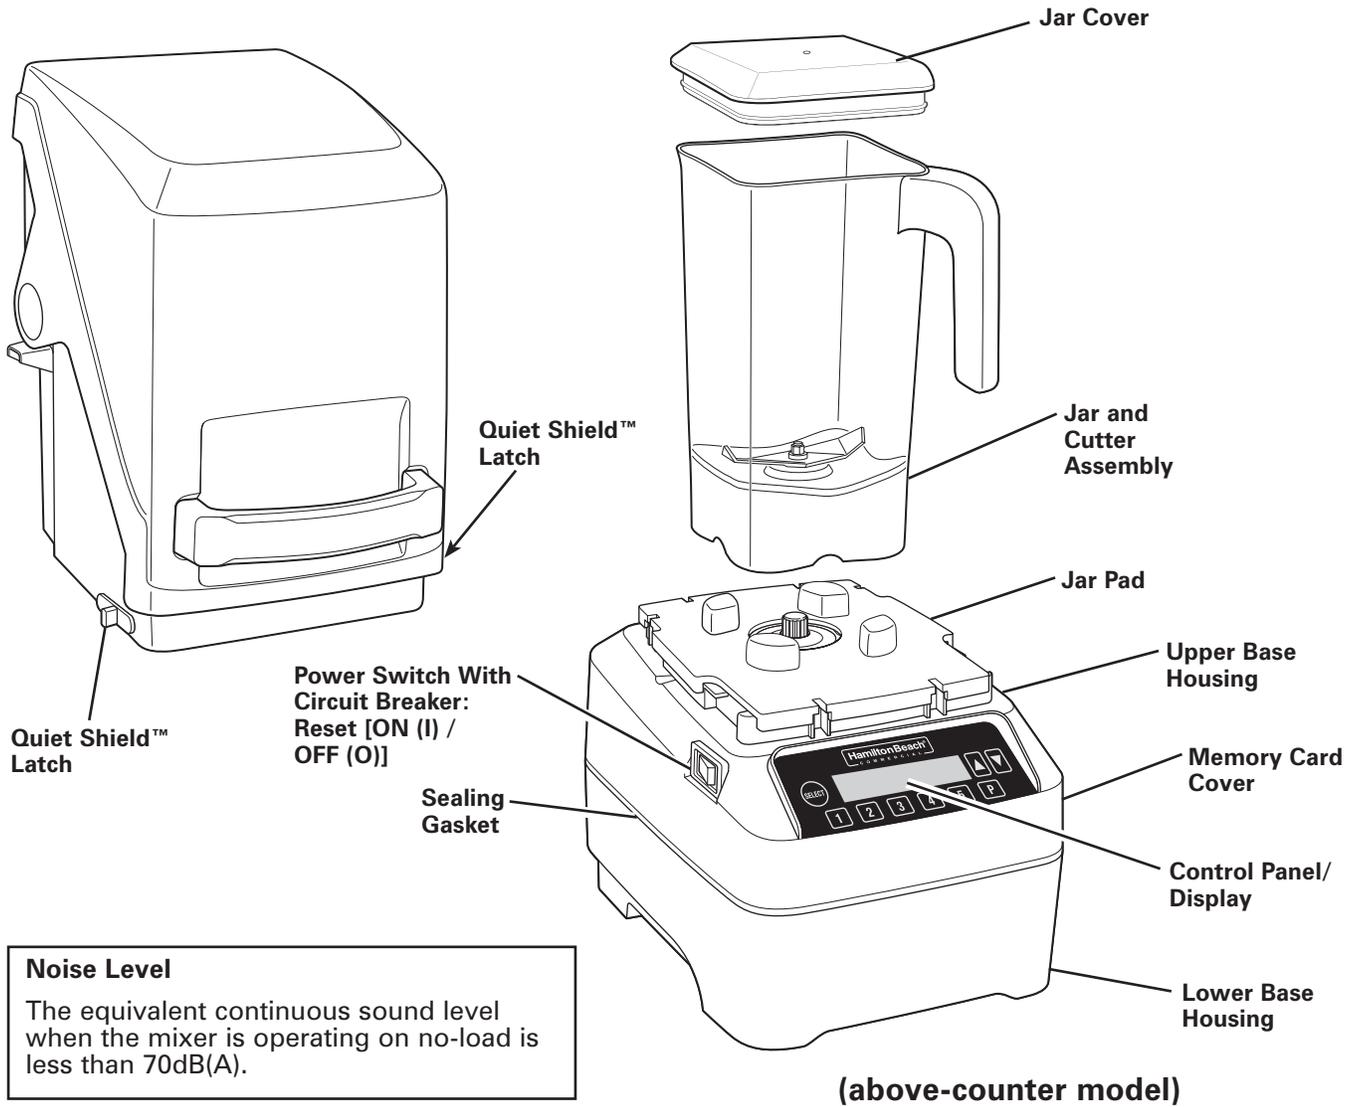


## Optional

### To Load Custom Programs with the Memory Card:

1. Turn OFF (O). Unplug unit.
2. Remove the memory card cover.
3. Insert memory card.
4. Plug in unit. Turn ON (Reset).
5. Display will show a confirmation message.
6. Turn OFF (O). Unplug unit.
7. Remove memory card and reinstall the memory card cover.

# Control Panel

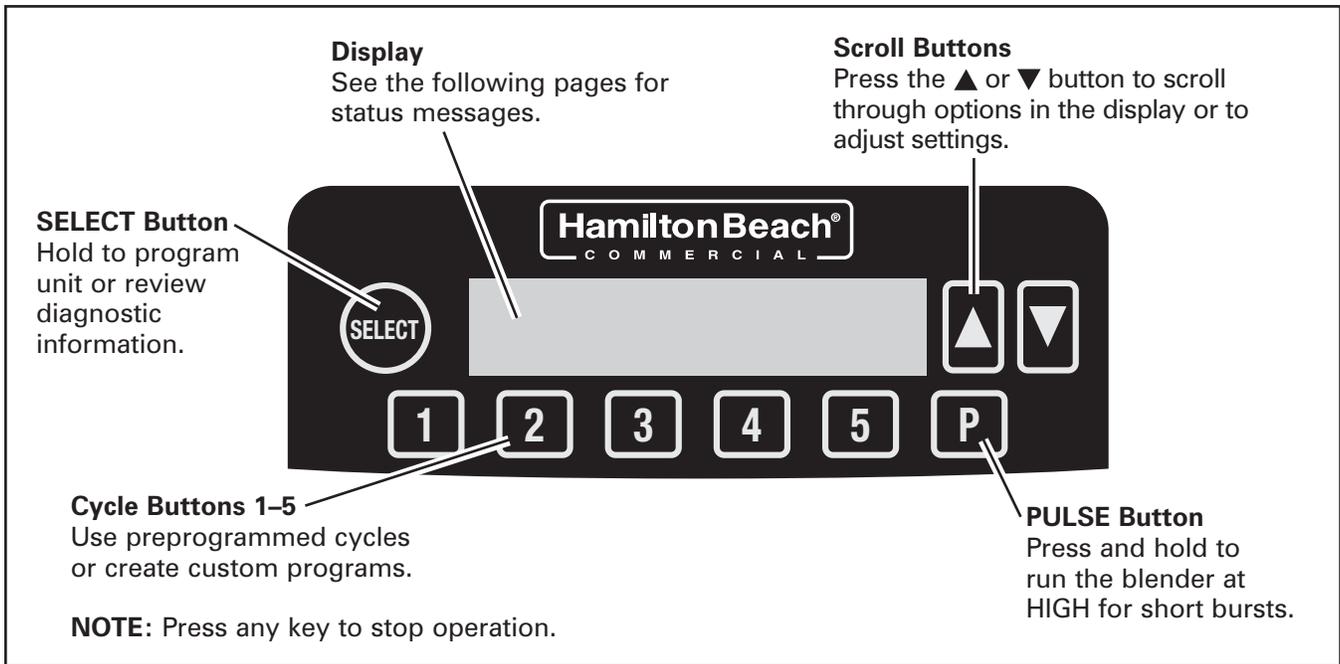

## Blender Operation – Quick Start Guide

1. Read Important Safety Instructions and Warning Symbol Explanations before use.
2. Place the blender on a dry, level surface.
3. Make sure the power switch is OFF (O). Plug the blender into a grounded 3-prong electrical outlet.
4. Place the container on the base with ingredients and container lid in place. Lower Quiet Shield™. Blender will not operate with Quiet Shield™ open.
5. Turn the blender on by pressing the Power Switch marked Reset [ON (I)/OFF (O)]. The red LED switch indicates that power is ON (I).
6. Select the desired function.
7. Use any button to stop operation.

## Using the Controls

**1 2 3 4 5 P**

These preset program buttons each have a blending cycle designed for commonly made drinks. Each button can be changed to a different preprogrammed cycle using the directions below.

### Changing Programs

**PROGRAM UNIT**  
SELECT OR SCROLL  
Hold **SELECT** to program unit. Press **SELECT** to continue.

**PROGRAM 1-8**  
SCROLL OR HOLD 1-5  
There are 8 preset programs. Scroll up ▲ to view the program. Hold button 1-5 to assign a program or continue to scroll up ▲ for the following additional programs.

**HIGH SPEED**  
Y-SELECT OR SCROLL

**LOW SPEED**  
Y-SELECT OR SCROLL

**JUMP SPEED**  
Y-SELECT OR SCROLL

Press **SELECT** and scroll up ▲ to select cycle time. Hold button 1-5 to assign a program.  
**NOTE:** Saving a new cycle to a location will overwrite any existing cycle in that location.

# Using the Controls

Hold **P** button to run blender at high speed. Release to stop blender.

## Information and Settings

PROGRAM UNIT  
SELECT OR SCROLL

Hold  to enter the menu and scroll up  to INFORMATION option.

INFORMATION  
SELECT OR SCROLL

Press  to enter INFORMATION menu and scroll up  to view below options.

For all options below, press  to view information or scroll for next option. Press  a second time during any option to exit program menu.

CYCLES INTO WARRANTY



CYCLES INTO WARRANTY.

CUSTOM CYCLE COUNTER



CUSTOM CYCLE COUNTER. This cycle counter can be reset by the operator.

CLEAR CYCLE COUNTER



CLEAR CYCLE COUNTER. This option will only clear custom cycle counter, not cycles into warranty.

CUSTOMER SERVICE



CUSTOMER SERVICE.

DISPLAY BACKLIGHT



DISPLAY BACKLIGHT. Scroll to enable or disable option for constant display of backlight.

RUN COOL DOWN CYCLE



RUN COOL DOWN CYCLE. If the blender motor overheats, this message will be displayed to prompt you to run a cool-down cycle. Remove the container from the blender and press . (For 230V, the Quiet Shield™ must be closed.)

FACTORY DEFAULTS



FACTORY DEFAULTS. This option will restore all programs to factory defaults.

SOFTWARE VERSION



SOFTWARE VERSION.

EEPROM VERSION



EEPROM VERSION.

# Troubleshooting Guide

| Problem . . .                                                                    | Solution . . .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|----------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Blender fails to start or stops while it is running and display is blank.        | <ul style="list-style-type: none"> <li>• Make sure that the Power Switch is in the ON (Reset) position and is illuminated red.</li> <li>• Make sure Quiet Shield™ is completely closed. Blender will not operate if cover is open.</li> <li>• Check to see if unit is securely plugged into an electrical outlet of the proper voltage and frequency.</li> <li>• Check to see if the fuse for the electrical outlet has blown or if the Power Switch has tripped.</li> <li>• This blender is equipped with motor overload protection. If the motor stops during operation due to overheating, unplug and allow the blender to cool down for 15 minutes. Plug blender back in after 15 minutes to resume normal operation.</li> </ul> |
| Blender fails to start or stops while it is running; message appears in display. | <ul style="list-style-type: none"> <li>• Make sure that the jar is seated properly on the blender base.</li> <li>• Blender will not operate unless jar is properly seated and Quiet Shield™ is closed.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Blender fails to start or stops while it is running.                             | <ul style="list-style-type: none"> <li>• Thermal overload protection has been tripped. Attempt to run “cool down cycle.” Follow instructions in display.</li> <li>• This blender is equipped with motor overload protection. If the motor stops during operation due to overheating, unplug and allow the blender to cool down for 15 minutes. Plug blender back in after 15 minutes to resume normal operation.</li> </ul>                                                                                                                                                                                                                                                                                                          |
| Unit does not respond to button commands or error message appears in display.    | <ul style="list-style-type: none"> <li>• Turn the power off and back on using the power switch to reset the controls.</li> <li>• Turn the power off and back on using the power switch. If the error message still appears, the unit will need to be serviced.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| Ingredients will not mix properly.                                               | <ul style="list-style-type: none"> <li>• Check to see if enough liquid has been added to the ingredients. Mixture should be fluid and free-running at all times.</li> <li>• Solid pieces are too large.</li> <li>• Container is too full. Do not fill past highest graduation marking.</li> <li>• Cutter assembly blades are not sharp or are damaged. Inspect container and cutter assembly daily. Replace cutter assembly at least yearly or sooner if cutter assembly appears worn or damaged.</li> <li>• Check to see if cutter assembly is installed properly.</li> <li>• Select speed to create a fluid blend.</li> </ul>                                                                                                      |


## 重要な安全上の注意事項

**警告** – 電化製品を使用する際には、以下を含む基本的な安全上の注意事項に従ってください。

- これらの電化製品に意図される用途はレストランや食堂、病院の厨房などのような商業的使用や、ベーカリー、肉屋などの営利事業での使用ですが、食品の連続大量生産は対象としていません。
- ブレンダーの使用前に本取扱説明書をお読みください。取扱説明書は参照しやすい場所に保管してください。
- 初めて使用する前に、容器アセンブリをせっけん水で洗浄してください。食洗機に入れないでください。
- 接地されたコンセントにプラグを差し込みます。
- 接地を除去しないでください。
- アダプターを使用しないでください。
- 延長コードを使用しないでください。
- 掃除や保守作業を行なう前に、電源を切断してください。
- 身体への傷害の危険を減らすため、非使用時や部品の取り付け・取り外し時はプラグをコンセントから外してください。
- ブレンダーのプラグを外し、電源コードの絶縁部分に亀裂がないか毎週チェックしてください。修理や交換が必要な場合は「テクニカルサービス」を参照してください。
- 感電から保護するため、コードやプラグ、ブレンダーを水やその他の液体に浸さないでください。
- ベースのモーターアセンブリは、高圧スプレーガンやスチームクリーナーで掃除しないでください。
- 高温の油やその他の熱い液体を含むアプライアンスを移動する際には細心の注意を払う必要があります。
- アプライアンスは、意図された用途以外には使用しないでください。
- 子どもの近くでの使用は意図されていません。
- 子どもは、このアプライアンスで遊ぶことがないように監督する必要があります。
- このアプライアンスは、安全性についての責任を負う人物によりアプライアンスの使用について監督や指示がなされている場合を除き、身体的、感覚的または知的能力に障害のある方、または経験や知識が不足している方による使用は意図されていません。
- アプライアンスのメーカーにより推奨されていない付属品の使用は、傷害を引き起こす恐れがあります。
- 負傷のリスクを抑え、ブレンダーや容器およびカッターアセンブリへの損傷を防止するため、ブレンダーの運転中にはブレンダージャーの中に調理器具を入れないでください。
- 不注意にブレンダーに電源が入ってしまうとブレンダーが損傷してしまうため、ジャーの中には調理器具を保管しないでください。
- 重大な人身傷害の可能性を回避するため、ブレンダーの運転中はブレンダージャーの中に手を入れないでください。ブレンダーは、必ずカバーをかぶせてから操作してください。
- 可動部品には触れないでください。付属品を交換したり使用中の可動部品に触れる前に、アプライアンスのスイッチを切り、電源から切断してください。
- ブレードは鋭いので、特に取り外し時やブレンダージャーの洗浄時には慎重に取り扱ってください。
- カッターアセンブリのブレードが緩んでいる場合は、直ちに使用を中止してジャーを交換してください。カッターアセンブリの修理を試みたり締めようとししないでください。
- 高温の液体がブレンダージャーに注ぐと、突然湯気が立つことにより液体がアプライアンスの外に出してしまう場合がありますので、ご注意ください。
- ジャーとカッターアセンブリは毎日点検してください。破損していたり、一部が欠けていたり亀裂の入ったジャーは使用しないでください。カッターに摩耗や切れ目、またはブレードの破損がないかどうか確認してください。破損したり緩んだ、または割れたブレードは使用しないでください。
- 屋外では使用しないでください。
- このアプライアンスでは、定格動作時間2分の短い運転時間が意図されています。
- 運転中はブレンダーを放置しないでください。
- ブレンダーやジャー、カッターアセンブリへの損傷を回避するため、運転中はブレンダーを移動したり振らないでください。運転中にブレンド動作が停止した場合は、ブレンダーをオフ (O) にしてベースからジャーを取り外し、ブレンダーカバーと外し、薄いゴムベラを使って中身をカッターに向けて押してください。
- 高温の液体により、ブレンド中に蓋が押されて外れてしまう場合があります。火傷を防ぐため、ブレンダージャーには1クォート (1リットル) のレベルを超える量を入れないでください。なべつかみや厚手のタオルを使って手を保護し、片手で蓋の上を押さえます。露出した皮膚は蓋から遠ざけます。最低速度でブレンドを開始します。
- ブレンダーには、ユニットの側面に電源スイッチ/回路遮断器があります。モーターの回転が停止したら、電源スイッチをリセットします。
- このブレンダーのモーターには熱過負荷保護装置が備わっています。捜査中にモーターの回転が停止したり再起動しない場合は、プラグを外して15分間冷却させてください。コンセントに再度プラグを差し込み、操作を再開します。
- 本製品の通常の機能は、強力な電磁干渉によって妨害される可能性があります。これが発生した場合は、製品をリセットし、本取扱説明書に従って通常の操作を再開してください。通常の操作を再開できない場合は、本製品を別の場所に配置してください。
- コードやプラグが損傷していたり、アプライアンスに故障があった場合、または本製品を落としたり何らかの形で破損した場合は、操作しないでください。本製品の電源コードに損傷がある場合、メーカーや修理業者、またはそれに類似する有資格者により交換してもらう必要があります。検査、修理または電気的・機械的調整の方法に関する説明については、「テクニカルサービス」を参照してください。

**– 本説明書は大切に保管してください –**

これらの電化製品に意図される用途はレストランや食堂、病院の厨房などのような商業的使用や、ベーカリー、肉屋などの営利事業での使用ですが、食品の連続大量生産は対象としていません。

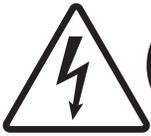

#### 感電の危険

ブレンダーベースの掃除を行なう前に、電源を切断してください。


この指示に従わないと、死亡や感電を引き起こすおそれがあります。



#### 火傷の危険

高温の内容物をブレンドする場合は、必ず十分に注意してください。

この指示に従わないと、火傷を引き起こすおそれがあります。

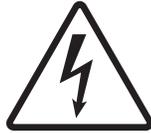

#### 感電の危険

プラグは接地されたコンセントに差し込んでください。

接地を除去しないでください。

アダプターを使用しないでください。

延長コードを使用しないでください。

この指示に従わないと、死亡や火災、感電を引き起こす可能性があります。



#### 切傷の危険

ブレンド中は必ずジャーにカバーをかぶせてください。

ブレンド中はジャーの中に手やスプーン、その他の台所用具を入れないでください。

この指示に従わないと、骨折や切り傷、その他の負傷を引き起こす可能性があります。


## 消毒

冷たい (60°F/16°C) 浄水1ガロン (3.8ガロン) あたり大さじ1 (15 ml) の家庭用漂白剤を、漂白剤の説明に従って混合し、これを使って消毒します。

1. ジャーに消毒液を入れ、蓋と投入口キャップをかぶせて、ブレンダーを低速で2分間運転します。ジャーを空にします。
2. 消毒液で湿らせた柔らかい布で外側を拭きます。
3. 蓋と投入口キャップを消毒液に2分間浸します。
4. 空のジャーをベースに配置し、高速でブレンダーを2分間運転し、カッターアセンブリから水分を取り除きます。
5. 使用の準備ができたなら、きれいな水ですすぎます。



18



18



19



20

## テクニカルサービス

ヘルプや交換部品については、以下のテクニカルサービスにお電話またはメールでご連絡ください。

866-285-1087 (米国、カナダ) もしくは  
+1-910-693-4277、


[commercial.support@hamiltonbeach.com](mailto:commercial.support@hamiltonbeach.com)

アジア太平洋地域: +86-400-930-2722、  
[hbcapac.support@hamiltonbeach.com](mailto:hbcapac.support@hamiltonbeach.com)

[www.hamiltonbeachcommercial.com](http://www.hamiltonbeachcommercial.com)

# 部品と機能

## Quiet Shield™

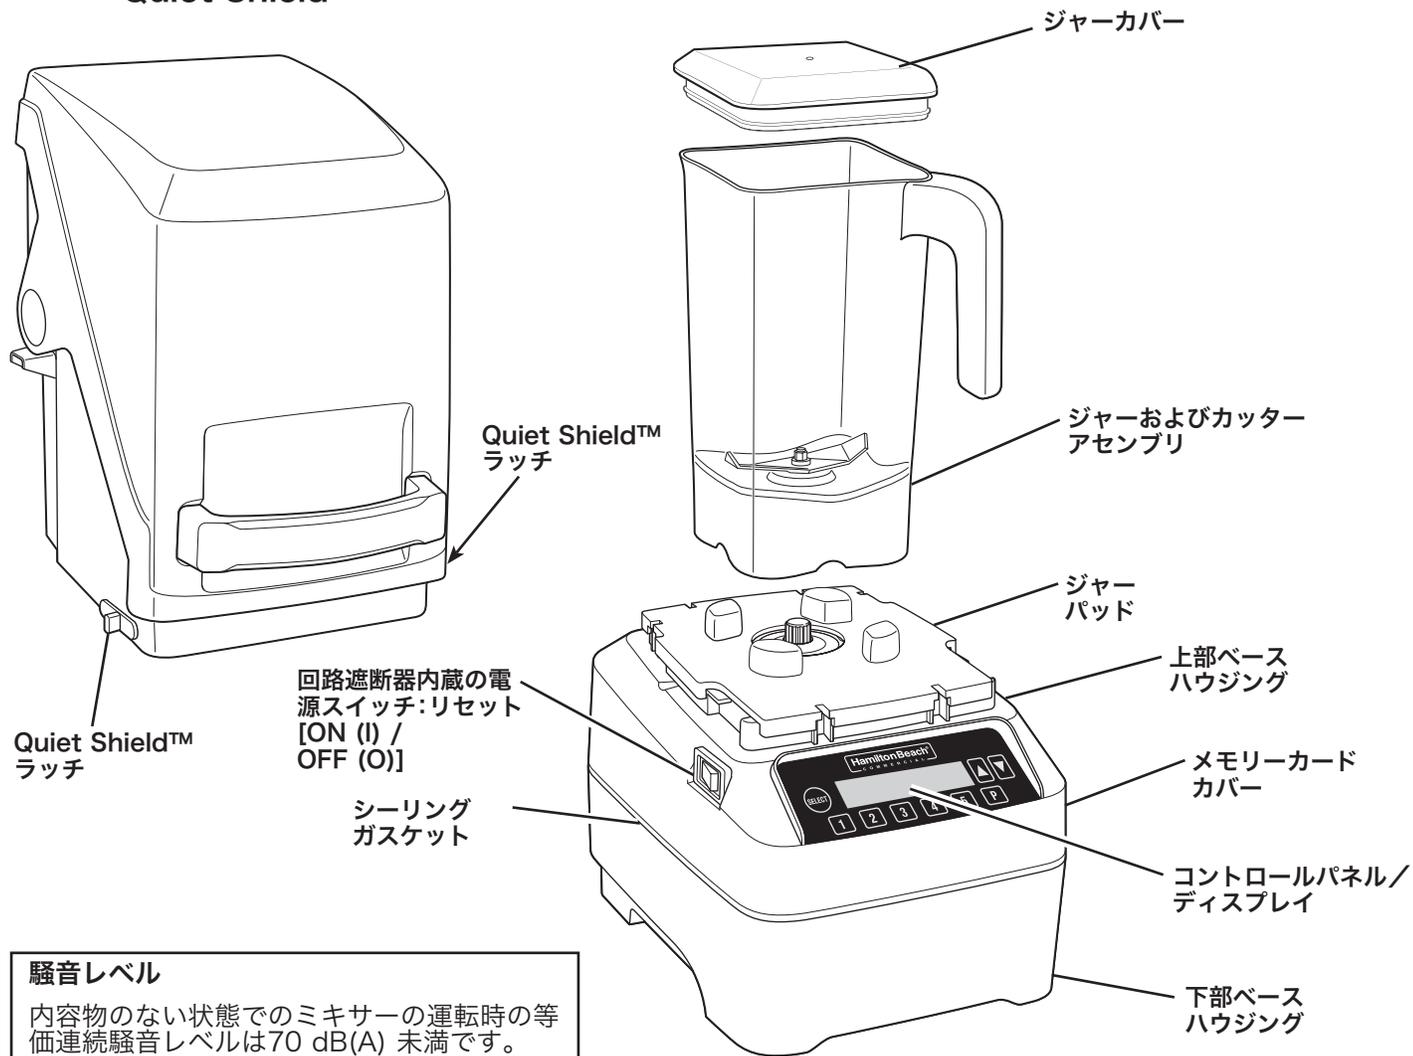

(上部カウンターモデル)

### 騒音レベル

内容物のない状態でのミキサーの運転時の等価連続騒音レベルは70 dB(A) 未満です。

## オプション

### メモリーカードを使ってカスタムプログラムを読み込むには:

1. 電源をOFFにします (O)。ユニットの電源プラグを抜きます。
2. メモリーカードカバーを外します。
3. メモリーカードを挿入します。
4. ユニットの電源プラグを差し込みます。ONにします (Reset)。
5. ディスプレイに確認メッセージが表示されます。
6. 電源をOFFにします (O)。ユニットの電源プラグを抜きます。
7. メモリーカードを取り外し、メモリーカードカバーを取り付け直します。

# コントロールパネル

**ディスプレイ**  
ステータスメッセージについては以下のページを参照してください。

**スクロールボタン**  
表示されたオプションをスクロールしたり設定を調整するには ▲ か ▼ ボタンを押します。

**選択ボタン**  
ユニットのプログラムを設定したり診断情報をレビューするには、これを長押しします。

**サイクルボタン 1~5**  
プログラムされていないサイクルを使用するか、カスタムプログラムを作成します。

**パルスボタン**  
ブレンダーを高速の短いバーストで運転するには、これを長押しします。

**注意：** 運転を停止するには任意のキーを押します。

## ブレンダー運転 – クイックスタートガイド

1. 使用前に、重要な安全上の注意と警告シンボルの説明をお読みください。
2. ブレンダーは乾燥した水平面に配置してください。
3. 電源スイッチがOFFになっていること (O) を確認してください。接地された3ピン型の電気コンセントにプラグを差し込みます。
4. 食材を入れて蓋をかぶせてある状態で、ジャーをベースに配置します。Quiet Shield™を閉じます。Quiet Shield™が開いている状態ではブレンダーは動作しません。
5. リセット [ON (I)/OFF (O)] と記された電源スイッチを押してブレンダーをオンにします。赤のLEDスイッチは電源が ON (I) であることを示します。
6. 希望の機能を選択します。
7. 任意のボタンを使って運転を停止します。

## コントロールの使用

**1 2 3 4 5 P**

各プリセットプログラムボタンには、よく作られるドリンク用のブレンディングサイクルが割り当てられています。各ボタンは、下記の説明に従うことにより、事前にプログラムされた異なるサイクルに変更することができます。

### プログラムの変更

**PROGRAM UNIT  
SELECT OR SCROLL**      ユニットのプログラムを設定するには ● (SELECT) を長押しします。● (SELECT) を押して続行します。

**PROGRAM 1-8  
SCROLL OR HOLD 1-5**      プロセットプログラムは8つあります。▲ でスクロールアップしてプログラムを確認します。1~5のボタンを長押ししてプログラムを割り当てるか、次の追加プログラムまで ▲ でスクロールアップします。

**HIGH SPEED  
Y-SELECT OR SCROLL**      **LOW SPEED  
Y-SELECT OR SCROLL**      **JUMP SPEED  
Y-SELECT OR SCROLL**

● (SELECT) を押して ▲ でスクロールアップし、サイクル時間を選択します。1~5のボタンを長押ししてプログラムを割り当てます。

**注意：** 新規のサイクルを任意の場所に保存すると、そこにある既存のサイクルは上書きされます。

# コントロールの使用

ブレンダーを高速で運転するには **P** ボタンを押したままにします。ブレンダーを停止するにはボタンをリリースします。

## 情報と設定

PROGRAM UNIT  
SELECT OR SCROLL

 を長押ししてメニューを開き、▲ でINFORMATIONオプションまでスクロールアップします。

INFORMATION  
SELECT OR SCROLL

 を押してINFORMATIONメニューを開き、▲ で以下のオプションを表示させます。

以下のすべてのオプションでは、 を押して情報を表示するか、次のオプションにスクロールします。プログラムメニューを閉じるには、任意のオプション画面で  をもう一度押します。

CYCLES INTO WARRANTY



CYCLES INTO WARRANTY (保証期間内サイクル)。

CUSTOM CYCLE COUNTER



CUSTOM CYCLE COUNTER (カスタムサイクルカウンター)。このサイクルカウンターはオペレータによりリセット可能です。

CLEAR CYCLE COUNTER



CLEAR CYCLE COUNTER (サイクルカウンターの消去)。このオプションではカスタムサイクルカウンターのみが消去されますが、保証期間内のサイクル数は消去されません。

CUSTOMER SERVICE



CUSTOMER SERVICE (カスタマーサービス)。

DISPLAY BACKLIGHT



DISPLAY BACKLIGHT (ディスプレイのバックライト)。スクロールして、ディスプレイのバックライトを常時オンにするオプションを有効または無効にします。

RUN COOL DOWN CYCLE



RUN COOL DOWN CYCLE (クールダウンサイクルの実行)。ブレンダーモーターが過熱した場合、このメッセージが表示され、クールダウンサイクルを実行するよう促されます。ブレンダーからジャーを取り外し、 を押してください。(230Vモデルでは、Quiet Shield™ が閉じられている必要があります。)

FACTORY DEFAULTS



FACTORY DEFAULTS (工場出荷時の初期設定)。このオプションを使うと、すべてのプログラムを工場出荷時の初期設定にすることができます。

SOFTWARE VERSION



SOFTWARE VERSION (ソフトウェアバージョン)。







EEPROM VERSION















EEPROM VERSION (EEPROMバージョン)。

# トラブルシューティングガイド

| 問題...                                                   | 解決策...                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|---------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>ブレンダーが運転を開始しなかったり、運転中に停止してディスプレイが空白になります。</p>        | <ul style="list-style-type: none"> <li>・ 電源スイッチがON (Reset) 位置にあり、赤に点灯していることを確認してください。</li> <li>・ Quiet Shield™が完全に閉じられていることを確認してください。カバーが開いているとブレンダーは動作しません。</li> <li>・ ユニットのプラグが適切な電圧と周波数のコンセントにしっかりと差し込まれているかどうかを確認してください。</li> <li>・ コンセントのヒューズが切れているかどうか、または電源スイッチが遮断されているかどうかを確認してください。</li> <li>・ このブレンダーにはモーター過負荷保護機能が搭載されています。運転中の過熱によりモーターが停止した場合は、電源プラグを外して15分間ブレンダーをクールダウンさせてください。15分が経過したらブレンダーのプラグを再び差し込み、通常の運転を再開します。</li> </ul> |
| <p>ブレンダーが運転を開始しなかったり、運転中に停止します。ディスプレイにメッセージが表示されます。</p> | <ul style="list-style-type: none"> <li>・ ジャーがブレンダーのベースにしっかりと取り付けられていることを確認してください。</li> <li>・ ジャーがベースに完全にしっかりと固定され、Quiet Shield™が閉じられていないとブレンダーは動作しません。</li> </ul>                                                                                                                                                                                                                                                                              |
| <p>ブレンダーが運転を開始しなかったり、運転中に停止します。</p>                     | <ul style="list-style-type: none"> <li>・ 熱過負荷保護機能が作動されています。「クールダウンサイクル」を実行してみてください。ディスプレイ上の指示に従ってください。</li> <li>・ このブレンダーにはモーター過負荷保護機能が搭載されています。運転中の過熱によりモーターが停止した場合は、電源プラグを外して15分間ブレンダーをクールダウンさせてください。15分が経過したらブレンダーのプラグを再び差し込み、通常の運転を再開します。</li> </ul>                                                                                                                                                                                       |
| <p>ユニットがボタンによるコマンドに応答しないか、ディスプレイにエラーメッセージが表示されます。</p>   | <ul style="list-style-type: none"> <li>・ 電源スイッチを使って電源をオフにしてから再びオンにし、コントロールをリセットします。</li> <li>・ 電源スイッチを使って電源をオフにしてから再びオンにします。それでもエラーメッセージが表示される場合は、ユニットの修理が必要になります。</li> </ul>                                                                                                                                                                                                                                                                  |
| <p>食材が適切にミックスされません。</p>                                 | <ul style="list-style-type: none"> <li>・ 食材に十分な水分が加えられているかどうかを確認してみてください。混合物は、常に自由に動く流動体でなければなりません。</li> <li>・ 固形の内容物が大きすぎます。</li> <li>・ ジャーにもものを入れすぎです。最高レベルの印以上にもものを入れないでください。</li> <li>・ カッターアセンブリのブレードの切れ味が悪いか、損傷があります。ジャーとカッターアセンブリは毎日点検してください。カッターアセンブリは少なくとも年に1回か、カッターアセンブリに摩耗や損傷が見受けられる場合はそれより頻繁に交換してください。</li> <li>・ カッターアセンブリが適切に取り付けられているかどうか確認してください。</li> <li>・ 液体ブレンドを作成するための速度を選択します。</li> </ul>                                |

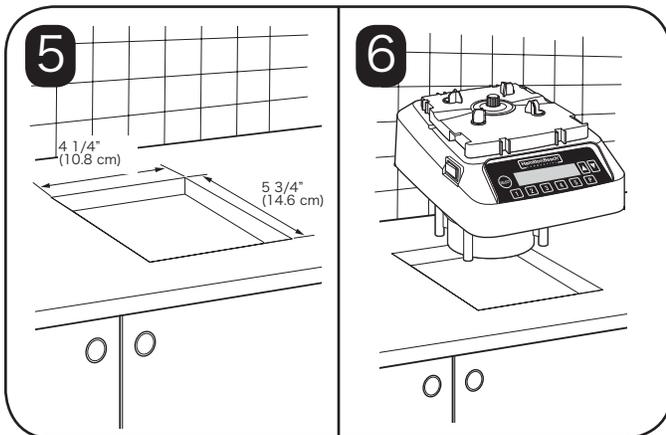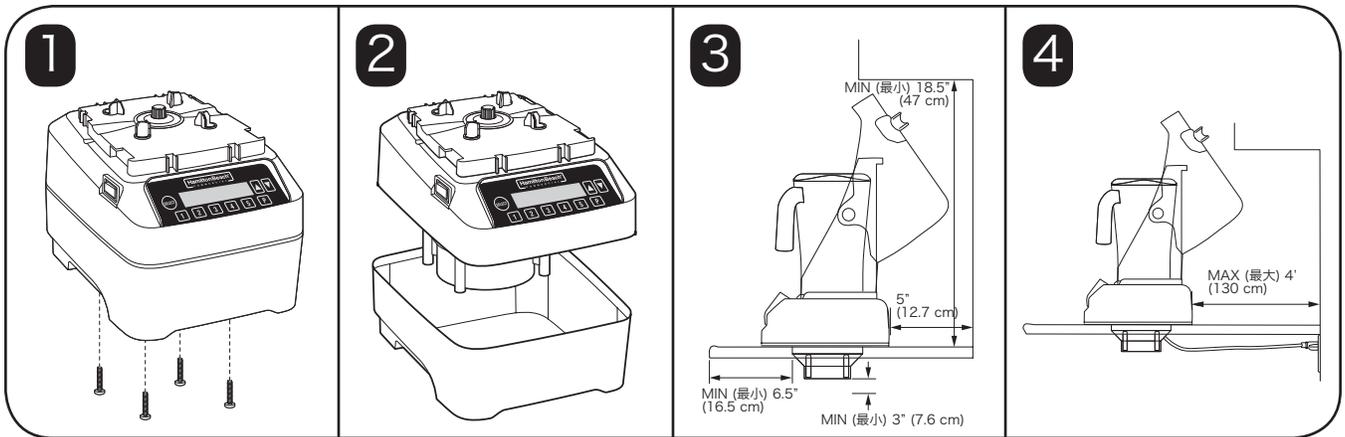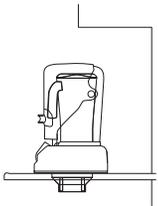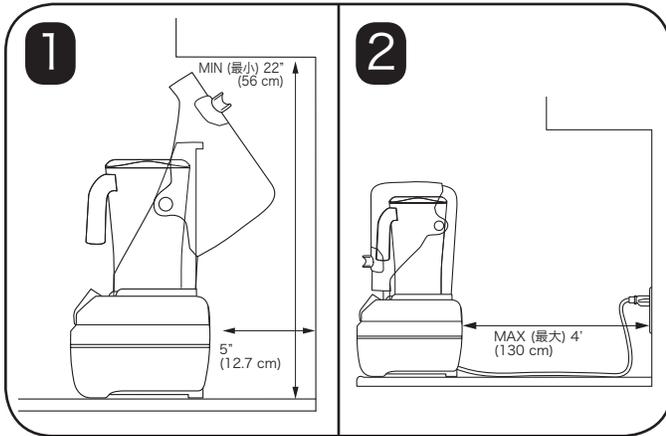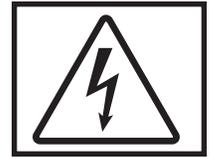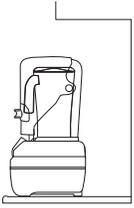

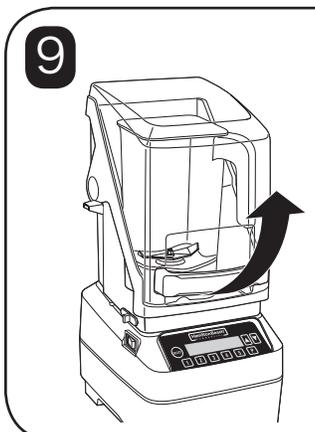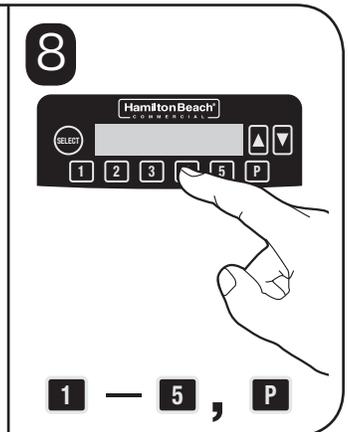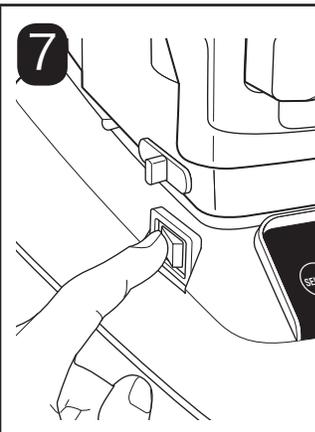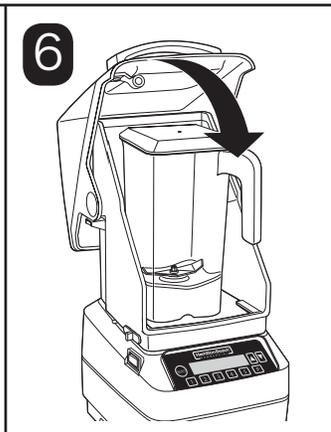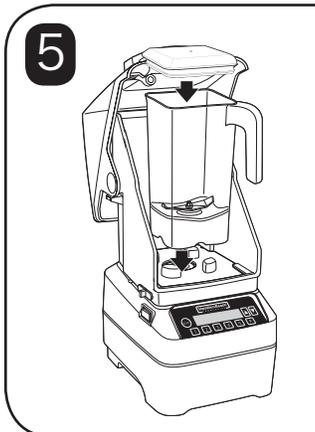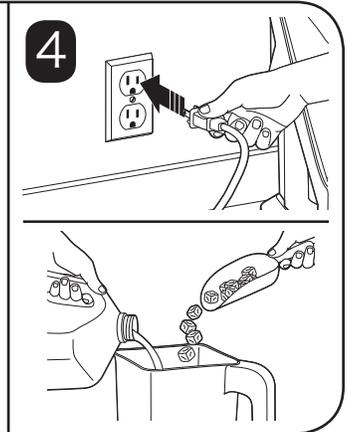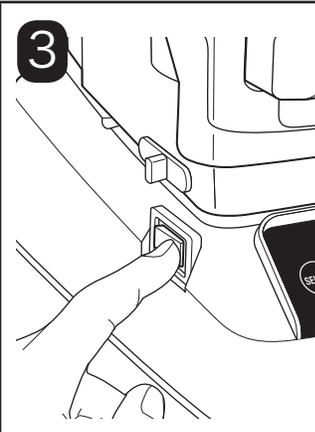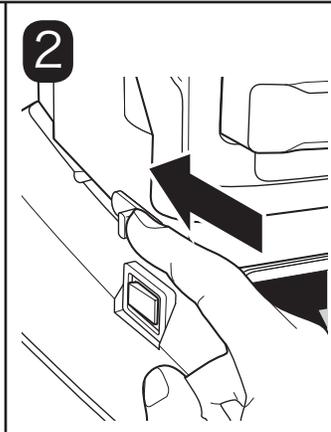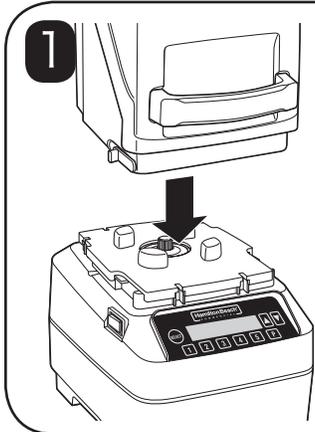

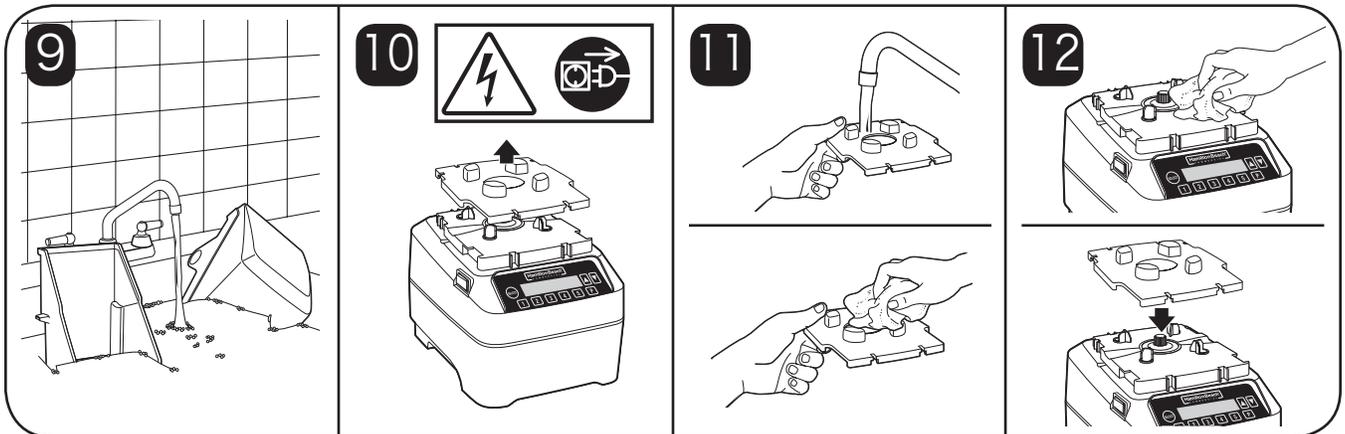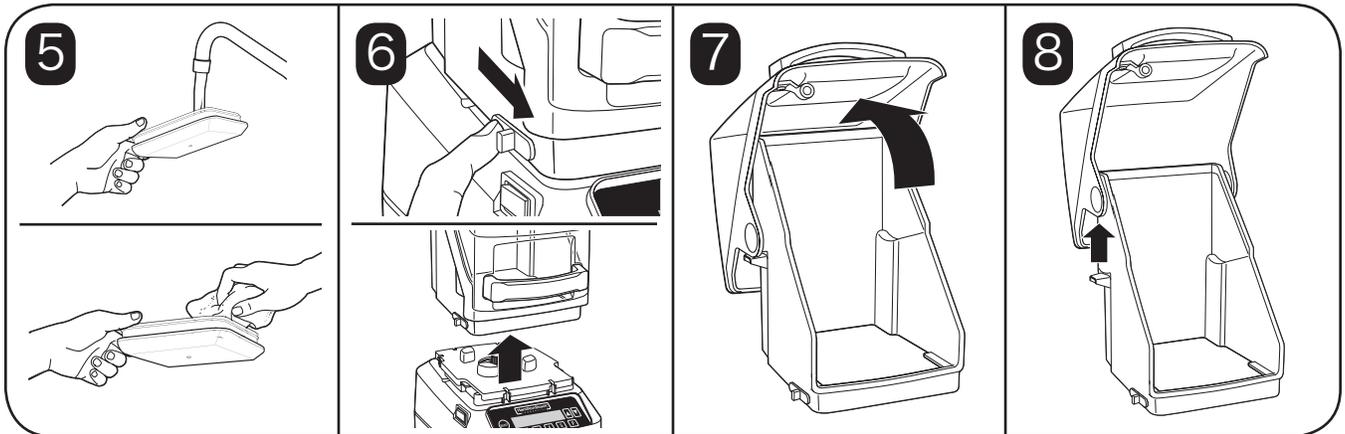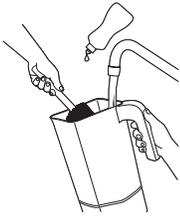

4421 Waterfront Drive  
Glen Allen, VA 23060

840334100  
09/19

[www.hamiltonbeachcommercial.com](http://www.hamiltonbeachcommercial.com)